

Instruments & Controls

The items listed below are described in this section.

Operation Component Locations	15
Indicators & Displays	19
Neutral Indicator	21
Reverse Indicator	21
Electric Power Steering (EPS) Indicator.....	21
4WD Differential Lock Indicator	21
High Coolant Temperature Indicator	21
PGM-FI Malfunction Indicator Lamp (MIL)	21
Seat Belt Indicator.....	21
Low Oil Pressure Indicator	22
Multi-function Display.....	25
Speedometer	26
Tachometer	27
Fuel Gauge	28
Odometer Display	29
Maintenance Minder Indicator	34
Digital Clock	35
Gear Position Indicator.....	36
AT Indicator, MT Indicator / LOW Indicator (except for SXS1000M3)	37
SPORT Indicator (except for SXS1000M3).....	37
Drive Mode Indicator (SXS1000M3/M3P/M5P/M5D).....	38
Drive Mode Indicator (SXS1000M3L/M5L).....	39
Driver Controls	40
Ignition Switch.....	40
Headlight Switch (SXS1000M3/M3P/M5P/M5D).....	41
Headlight Switch (SXS1000M3L/M5L).....	42
Shift Select Lever	43
Drive Mode Select Lever (SXS1000M3/M3P/M5P/M5D)	44
Drive Mode Select Lever (SXS1000M3L/M5L)	46
AT/MT Switch (except for SXS1000M3).....	48
SPORT Switch (except for SXS1000M3).....	49

(cont'd)