


# Indicators & Displays

## Fuel Gauge


The fuel gauge shows the approximate fuel supply available. The fuel tank capacity is:

7.9 US gal (30 ℓ)

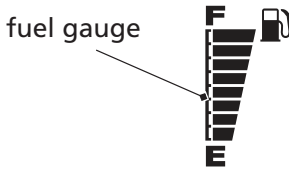

When the last segment blinks, you should refill the tank as soon as possible. The amount of fuel remaining when the blinking starts is approximately:

1.69 US gal (6.4 ℓ)

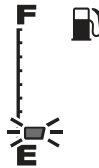

Fuel gauge failure:

If the fuel system has an error, the fuel gauge indicators will be displayed as shown in the illustrations.

If this occurs, see your dealer as soon as possible.

