


# Driver Controls

## Headlight Switch (SXS1000M3/M3P/M5P/M5D)

The headlight switch is located on the front console, to the left of the steering wheel. This switch turns the headlights and taillights on and off, and changes between low beam or high beam.

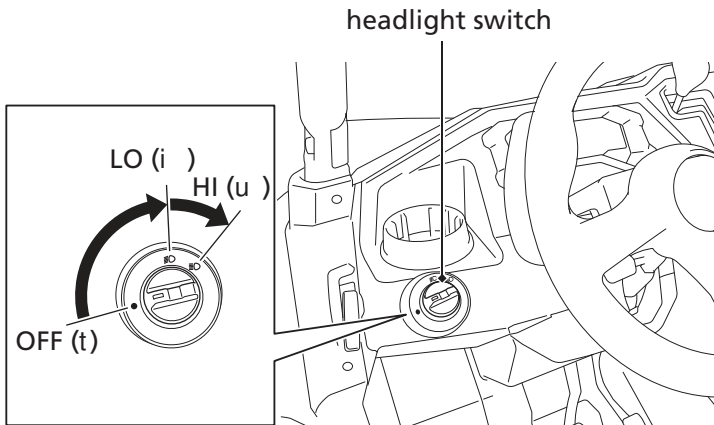

**OFF (t)** — The headlights and taillights are off.

**LO (i )** — The headlights and taillights are on. The headlights are low beam.

**HI (u )** — The headlights and taillights are on. The headlights are high beam.