

# Maintenance Schedule

Service the items listed at the indicated distance (or time, if given).											
			Initial maintenance	Regular maintenance interval							
FREQUENCY (Whichever comes first)	x100 mi		1	6	12	18	24	30	36	Note	Refer to page
	x100 km	Hours	1.5	10	20	30	40	50	60		
ITEMS			20	100	200	300	400	500	600		
	Lubricate all hinges, latches, and pivots					t			t		177
**	Inspect the following items:										—
	Suspension components										—
	Wheels										210
	Driveshaft boots										211
	Accelerator and brake pedals					t			t		182, 200
	Brake light switch										201
	Exhaust system										189
	Battery terminal condition										213
*	Check parking lock system adjustment		t						t		—
*	Check shift lever adjustment		t						t		—
**	Inspect the following items:										—
	Tie-rod ends										—
*	Steering gearbox and boots								t		—
*	Brake hoses and lines										—
*	SXS underbody									4	—
*	Inspect evaporative emission control system (USA - 50 states [meets California])								Every 2 years (regardless of mileage)		—
	Replace the following items:										—
	Front and rear final gear oil								Every 2 years (regardless of mileage)		166, 168
*	Engine coolant										172
*	Brake fluid										—

\* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 282).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.

Note 4 Check the underbody whenever the under guard has been hit.