

Maintenance Component Locations

- Indicates something visible.
-→ Indicates something concealed.

rear suspension spring pre-load adjuster (SXS1000M3/M3P only)
(page 191)

