

Air Cleaner Outer Cover Removal

Refer to *Safety Precautions* on page 123.

The air cleaner outer cover must be removed to replace the air cleaner and for spark plug maintenance.

Removal

1. Lift the cargo bed (page 81).
2. Remove the clips (page 142).
3. Remove the prong from the grommet.

Installation

1. Insert the prong into the grommet.
2. Install the clips.
3. Lower the cargo bed.

UNDER CARGO BED

