

# Air Cleaner

---

## Replacing Air Cleaner

### NOTICE

*Clean the air cleaner housing cover prior to removal.*

*Remove the air cleaner to the right side.*

*When removing the air cleaner, be careful not to allow foreign objects to drop into the air intake ducts.*

1. Lift the cargo bed (page 81).
2. Remove the air cleaner outer cover (page 140).
3. Clean the air cleaner housing cover and then remove it by removing the bolts.

### UNDER CARGO BED

air cleaner housing cover

