

# Battery

---

The battery is located under the front hood.

## Removal

1. Make sure the ignition switch is OFF (w).
2. Remove the front hood (page 137).
3. Remove the battery holder by removing the bolts. Then, remove the rubber cover.
4. Disconnect the negative (-) terminal lead from the battery first, then disconnect the positive (+) terminal lead.
5. Remove the battery from the battery box.
6. Charge the battery (see the following section), unless you have been driving regularly.
7. Store your battery in an easy-to-reach location off the floor, in an area protected from freezing temperature and direct sunlight.
8. Clean the battery box after removing the battery for storage. Dry the battery box.
9. Slow charge the battery (see following section) once every 30 days.

