

# If the Transmission Is Not Functioning Properly

---

8. Return the gear change tool to the tool kit.
9. Check that "E" is blinking. Next, tighten the emergency valve.  
Proceed to *"E" is blinking*.


If "--" is not displayed in the gear position indicator and you change the gear position by using the gear change tool, the DCT system will automatically stop. To reactivate the system, turn the ignition switch to the OFF (w) position, and then turn it back to the ON (q) position.

## "E" is blinking:

Tighten the emergency valve. Perform the following procedure.

1. Turn the ignition switch to the OFF (w) position, and then stop the engine.
2. Remove the rear mudguard lid (page 141).
3. Loosen the bolt and release the lock plate, and turn the emergency valve all the way in.

## UNDER CARGO BED

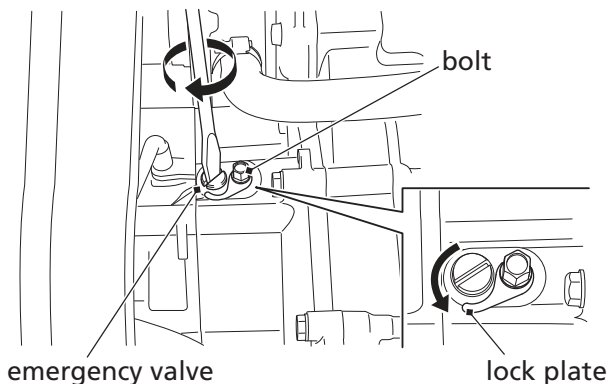

4. Tighten the bolt and the lock plate.
5. Install the rear mudguard lid.