
## **Indicators & Displays**

## **Odometer Display**

This display includes odometer, tripmeter, coolant temperature gauge, hour meter, maintenance tripmeter, and maintenance hour meter.

Each time you press the SEL/SET switch, mode will change as shown in the illustration.

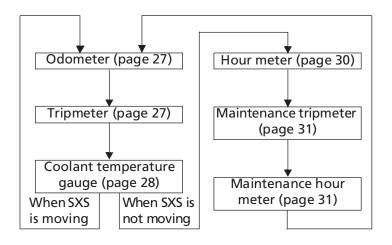

If there are unusual indications with your SXS, and SEL/SET switch is not pressed for 10 seconds, a message will automatically appear in the display.