


Seat Removal

Refer to *Safety Precautions* on page 107.

The driver seat and passenger seat can be removed in the same manner.

Removal

1. Open the door (page 48).
2. Pull the seat lock lever at the front center of the seat.
3. Pull the front of the seat upward then slide it slightly forward.

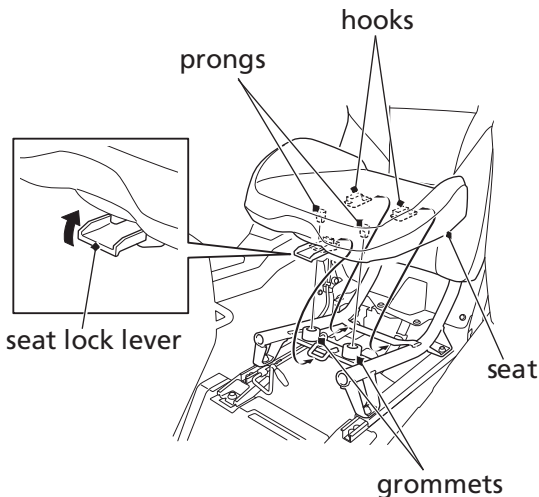

Installation

1. Insert the hooks into the frame and the prongs into the grommets of the seat.
 2. Press down on the seat until it locks.
- Make sure that the seat is locked securely in position by pulling it up lightly.
- Since the bottom shape of the driver seat and the passenger seat are different, install them in their correct position.