


Engine Oil & Filters

5. If required, remove the air cleaner outer cover (page 123) and oil fill cap, and then add the specified oil into the fill cap hole, up to the upper level mark on the dipstick. Do not overfill.
6. Reinstall the oil fill cap and dipstick, and then install the air cleaner outer cover.

NOTICE

Running the engine with an improper oil level can cause serious engine damage.

**IN FRONT OF CARGO BED
LEFT SIDE**

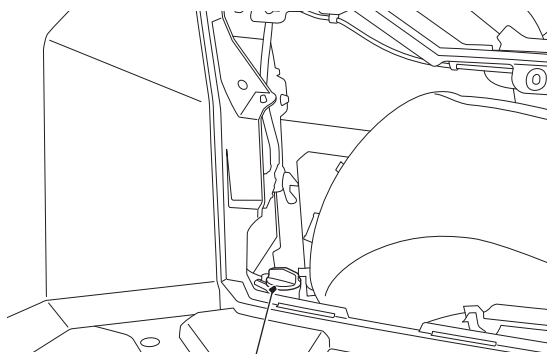

oil fill cap