

# Rear Final Gear Oil

---

## Changing Oil

Refer to *Safety Precautions* on page 107.

Change the oil with the rear final gear at normal operating temperature to assure complete and rapid draining.

1. Park the Honda SXS on a firm, level surface. Shift the shift select lever into the park (P) position.
2. Place an oil drain pan under the oil drain plug.
3. Remove the oil fill cap, O-ring, oil check bolt, drain plug and sealing washers.
4. After the oil has completely drained, reinstall the drain plug with a new sealing washer and tighten it to the specified torque:  
**9 lbf·ft (12 N·m, 1.2 kgf·m)**
5. Fill the rear final gear with the recommended oil.  
**3.9 US oz (115 cm<sup>3</sup>)**
6. Make sure the oil level is at the lower edge of the oil check inspection hole. Allow oil to settle for 1 minutes before proceeding to next step.

(cont'd)