

Brake Light Switch Adjustment

Refer to *Safety Precautions* on page 107.

Periodically check the operation of the brake light switch. It is located near the brake fluid reservoir.

The brake light should turn on just before the brake works.

Adjustment is done by holding the switch body and turning the adjusting nut.

Adjustment is done by holding the switch body and turning the adjusting nut. Turn the nut in direction (A) if the switch operates too late, and in direction (B) if the switch operates too soon.

UNDER LEFT FRONT FENDER

