

Tires

Always check air pressure when your tires are “cold.” If you check air pressure when your tires are “warm” — even if your Honda SXS has only been driven for a few miles — the readings will be higher. If you let air out of warm tires to match the recommended cold tire pressures, the tires will be underinflated. Be sure to check tire pressure at the driving site, since changes in altitude can affect air pressure.

The recommended “cold” tire pressures are:

RECOMMENDED PRESSURE	
FRONT	(SXS1000S2R) 16 psi (110 kPa) (SXS1000S2X) 14 psi (100 kPa)
REAR	(SXS1000S2R) 16 psi (110 kPa) (SXS1000S2X) 14 psi (100 kPa)