

If a Fuse Blows

Main & Circuit Fuses

1. To prevent an accidental short circuit, turn the ignition switch OFF (w) before checking or replacing fuses.
2. Remove the fuse box lid by releasing the prong from the grommet.

**BETWEEN DRIVER SEAT
AND PASSENGER SEAT**

