

Quick Reference

Scheduled Maintenance	Initial: 100 miles (150 km) Regular: every 600 miles (1,000 km)
Pre-drive Inspection	Each time before you drive (page 74): oil level, coolant, fuel level, brake fluid, tires, wheels, driveshafts, steering gearbox and boots, underbody, suspension, lights, controls, tie-rod ends, cargo, seat belts, driver seat position, side nets, exhaust system
Fuel/Capacity	Unleaded gasoline, pump octane number 86 or higher 7.27 US gal (27.5 ℓ)
Engine Oil/ Capacity, Sub-Transmission Oil/Capacity	API Service Classification SG or higher except oils labeled as energy conserving or resource conserving on the circular API service label, SAE 10W-30, JASO T 903 standard MA, Pro Honda GN4 4-stroke oil (USA & Canada) or Honda 4-stroke oil, or an equivalent engine oil after draining: 5.8 US qt (5.5 ℓ) after draining & engine oil filter change: 6.08 US qt (5.75 ℓ) after draining, engine & DCT oil filters change: 6.1 US qt (5.8 ℓ) sub-transmission oil after draining: 1.35 US qt (1.28 ℓ)
Maximum Weight Capacity	732 lb (332 kg) operator, passenger, all cargo and accessories