

Side Nets

Front Side Nets

The left and right side nets can be opened in the same manner.

Open

1. Release the side net buckle.
2. Hook the side net D-ring onto the side net hook while lifting the side net.

Close

1. Unhook the side net D-ring from the side net hook.
2. Fasten the side net buckle.

Always return the side nets to their normal positions, properly fastened, and tightened before driving.

