## **Basic Operation**

## **Selecting a Drive Mode**

**2WD** This mode supplies power to the rear wheels only, this

mode is best for surfaces with good traction.

**4WD** This mode supplies power to the front and rear wheels.

Steering will require slightly more effort than with 2WD. This mode is recommended for driving on

surfaces with relatively poor traction.

**4WD Diff** This mode supplies power to the front and rear wheels, and locks the front differential. As a result, steering will

require extra space and effort. Select this mode for

maximum traction.

Before using the drive mode select lever to change from one mode to another, be sure the vehicle is stopped and the engine is idling. See page 38 for additional information.