

Rear Final Gear Oil

Oil Recommendation

API classification	GL-4 or GL-5 except oils labeled as energy conserving on the circular API service label
type	hypoid gear oil
viscosity (weight)	SAE 80W-90
suggested oil	Honda shaft drive oil or equivalent

Checking Oil

Refer to *Safety Precautions* on page 105.

Check the rear final gear oil level every 1,800 miles (3,000 km) or 300 hours of operating your Honda SXS, and add if needed.

1. Park your Honda SXS on a firm, level surface.
2. Remove the oil fill cap.
3. Make sure the oil level is at the lower edge of the oil fill inspection hole.
4. Apply a thin coat of grease to a new O-ring, and insert it into the oil fill cap groove.
5. Install and tighten oil fill cap to the specified torque:
9 lbf·ft (12 N·m, 1.2 kgf·m)

RIGHT REAR

oil fill cap
O-ring

oil fill cap

