

Battery

The battery is located under the front seat.

Removal

1. Make sure the ignition switch is OFF (w).
2. Remove the front seat (page 122) and right side rubber dust cover.
3. Release the ring and remove the rubber band.
4. Disconnect the negative (-) terminal lead from the battery first, then disconnect the positive (+) terminal lead.
5. Remove the battery from the battery box.
6. Charge the battery (see the following section), unless you have been driving regularly.
7. Store your battery in an easy-to-reach location off the floor, in an area protected from freezing temperature and direct sunlight.
8. Clean the battery box after removing the battery for storage. Dry the battery box.
9. Slow charge the battery (see following section) once every 30 days.

