


# Indicators

## Gear Position Indicator

The gear position indicator (q) shows the gear position when the ignition switch is in the ON (q) position and the engine is running.

The indicator shows: 1 – 5 for the five forward speed gears.

### CENTER OF HANDLEBAR

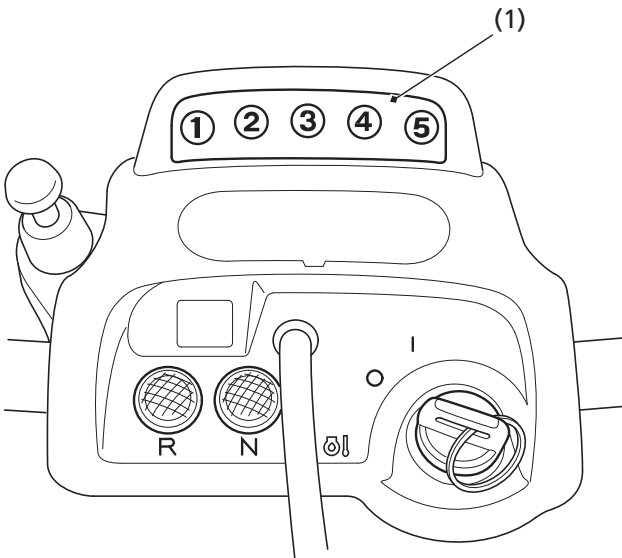

(1) gear position indicator