

# Controls & Features

## Ignition Switch

The ignition switch (1) is used for starting and stopping the engine (page 50). Insert the key and turn it to the right for the ON (I) position.

| Key Position | Function                         |
|--------------|----------------------------------|
| ON (I)       | Electrical circuits on.          |
| OFF (O)      | No electrical circuits function. |

### CENTER OF HANDLEBAR

