## **Spark Plug**

## **Spark Plug Recommendation**

| standard spark plug | DPR8EA-9 (NGK) or |
|---------------------|-------------------|
|                     | X24EPR-U9 (DENSO) |
| for cold climate    | DPR7EA-9 (NGK) or |
| (below 5°C, 41°F)   | X22EPR-U9 (DENSO) |
| for extended high   | DPR9EA-9 (NGK) or |
| speed riding        | X27EPR-U9 (DENSO) |

Use only the recommended type of spark plug in the recommended heat range.

 
## **NOTICE**

Using spark plugs with an improper heat range can cause engine damage.

## **Spark Plug Inspection & Replacement**

Refer to Safety Precautions on page 81.

- 1. Clean any dirt from around the spark plug base.
- 2. Disconnect the spark plug cap (1). Take care to avoid damaging the spark plug wire when disconnecting the cap.
- 3. Using a spark plug wrench provided in the tool kit, remove the spark plug.

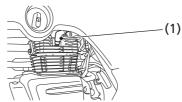

(1) spark plug cap

(cont'd)