


# Controls & Features

---

## Fuel Valve

### LEFT SIDE

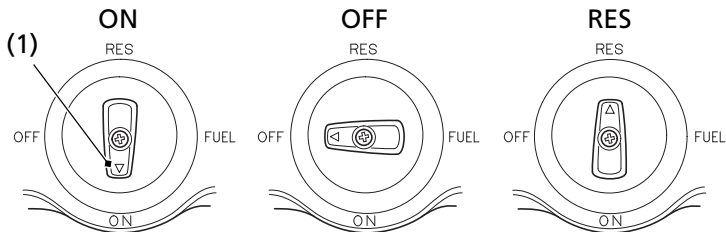

(1) three-way fuel valve

The manual three-way fuel valve (1) is located on the left side of the fuel tank.

The fuel valve is used to control the flow of fuel from the fuel tank to the carburetor.

ON — normal position for riding.

OFF — for parking, storing, or transportation.

RES — for extra fuel to get to a gas supply for refueling.

### Reserve Fuel

Remember to check that the fuel valve is in the ON position each time you refuel. If the fuel valve is left in the RES position, you may run out of fuel with no reserve.

For complete information about fueling your ATV, see page 93.