

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

FREQUENCY		WHICHEVER COMES FIRST	INITIAL			REGULAR			Refer to page
			MAINT.		MAINT. INTERVAL				
			mi	100	600	1200			
			km	150	1000	2000			
		MONTH	1	6	12				
ITEMS		NOTE	HOURS	20	100	200			
*	FUEL LINE					I	—		
*	THROTTLE OPERATION					I	109		
*	CARBURETOR CHOKE					I	111		
	AIR CLEANER	NOTE 1			C	C	104		
*	SUB AIR CLEANER	NOTE 1			C	R	—		
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	108		
	SPARK PLUG				I	I	115		
*	VALVE CLEARANCE				I	I	I	118	
	ENGINE OIL			INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			96		
**	ENGINE OIL CENTRIFUGAL FILTER					C	—		
*	ENGINE IDLE SPEED				I	I	I	114	
*	SECONDARY AIR SUPPLY SYSTEM					I	—		

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 198).

** In the interest of safety, we recommend these items be serviced only by your dealer.