

Maintenance Schedule

ITEMS		FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
			⇨	mi	100	600	1200	
				km	150	1000	2000	
				MONTH	1	6	12	
NOTE	HOURS	20	100	200				
	REAR FINAL GEAR CASE OIL				(R:EVERY 2 YEARS)			98
*	BRAKE FLUID	NOTE 3						116
*	BRAKE SHOE WEAR	NOTE 1						128
*	BRAKE LIGHT SWITCH							129
	BRAKE SYSTEM							116
*	REVERSE LOCK SYSTEM GUARDS							109
	GUARDS							137
*	CLUTCH SYSTEM							108
*	SUSPENSION							—
*	SPARK ARRESTER					C	C	115
*	NUTS, BOLTS, FASTENERS							—
**	WHEELS/TIRES							—
**	TIE-ROD AND JOINT BOOTS							—
**	STEERING SHAFT HOLDER BEARINGS							—
**	STEERING SYSTEM							—

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 192).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.