


# Air Cleaner

## Cleaning

1. Remove the seat by pulling the seat lock lever ( 1 ) up (page 88).

### UNDER SEAT

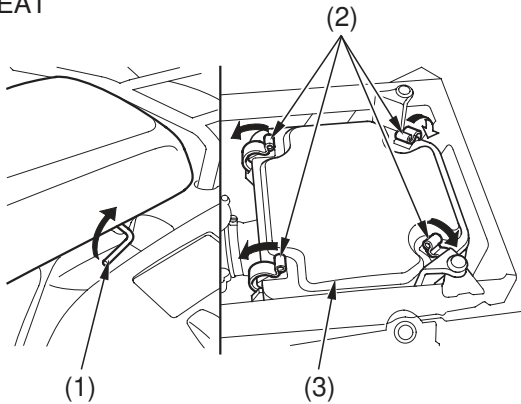

(1) seat lock lever  
(2) retainer clips

(3) air cleaner housing cover

2. Unlatch the four retainer clips (2).
3. Remove the air cleaner housing cover (3).

(cont'd)