


Air Cleaner

Cleaning

1. Remove the seat by pulling the seat lock lever (1) up ([page 88](#)).

UNDER SEAT

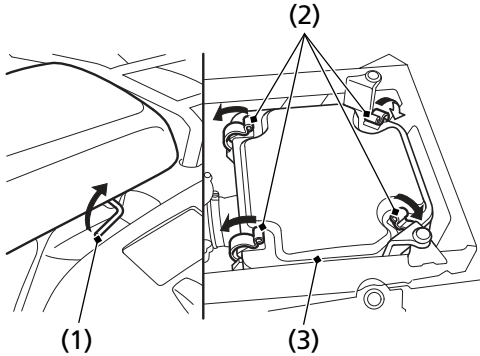

(1) seat lock lever

(3) air cleaner housing cover

(2) retainer clips

2. Unlatch the four retainer clips (2).
3. Remove the air cleaner housing cover (3).

(cont'd)