

Maintenance Schedule

| ITEMS | FREQUENCY | WHICHEVER COMES FIRST ⇒ | INITIAL MAINT. | | | REGULAR MAINT. INTERVAL | Refer to page | |
|-------|--------------------------------|----------------------------|----------------|-----|--------------------|-------------------------|---------------|------|
| | | | mi | 100 | 600 | | | 1200 |
| | | | km | 150 | 1000 | | | 2000 |
| | | | MONTH | 1 | 6 | | | 12 |
| | | NOTE | HOURS | 20 | 100 | 200 | | |
| | REAR FINAL GEAR CASE OIL | | | | (R: EVERY 2 YEARS) | I | 98 | |
| * | BRAKE FLUID | NOTE 3 | | | I | I | 116 | |
| * | BRAKE SHOE WEAR | NOTE 1 | | | I | I | 128 | |
| * | BRAKE LIGHT SWITCH | | | I | I | I | 129 | |
| | BRAKE SYSTEM | | | I | I | I | 116 | |
| * | REVERSE LOCK SYSTEM | | | I | I | I | 109 | |
| | GUARDS | | | | I | I | 137 | |
| * | CLUTCH SYSTEM | | | I | I | I | 108 | |
| * | SUSPENSION | | | | I | I | — | |
| * | SPARK ARRESTER | | | | C | C | 115 | |
| * | NUTS, BOLTS, FASTENERS | | | I | I | I | — | |
| ** | WHEELS/TIRES | | | I | I | I | 131 | |
| ** | TIE-ROD AND JOINT BOOTS | | | I | I | I | — | |
| ** | STEERING SHAFT HOLDER BEARINGS | | | | | I | — | |
| ** | STEERING SYSTEM | | | | | I | — | |

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 192).

** In the interest of safety, we recommend these items be serviced only by your dealer.