

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL MAINT.			Refer to page		
			REGULAR MAINT. INTERVAL					
			mi	100	600		1200	
			km	150	1000		2000	
MONTH	1	6	12					
NOTE	HOURS	20	100	200				
*	FUEL LINE				I	—		
*	THROTTLE OPERATION				I	105		
*	CARBURETOR CHOKE				I	107		
	AIR CLEANER	NOTE 1			C	C	100	
*	SUB AIR CLEANER	NOTE 1			C	R	—	
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	104	
	SPARK PLUG				I	I	111	
*	VALVE CLEARANCE				I	I	I	114
	ENGINE OIL				INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R		92	
**	ENGINE OIL STRAINER SCREEN					C	—	
**	ENGINE OIL CENTRIFUGAL FILTER					C	—	
*	ENGINE IDLE SPEED				I	I	I	110
*	SECONDARY AIR SUPPLY SYSTEM					I	—	

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 192).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.