

# Starting & Stopping the Engine


## Starting Procedure

To restart a warm engine, follow the procedure for ‘*High Air Temperature.*’

The starter motor will operate only when the transmission is in neutral.

Normal Air Temperature 10° – 35°C (50° – 95°F)

### CENTER OF HANDLEBAR

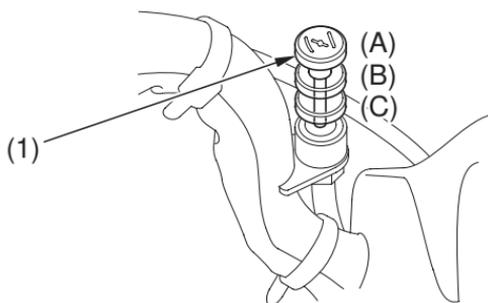

(1) choke knob

(A) fully ON

(B) halfway position

(C) fully OFF

1. If the engine is cold, pull the choke knob ( 1 ) up all the way to fully ON (A) position.
2. With the throttle slightly open, press the start button.

- Pressing the electric start button for more than 5 seconds at a time may cause the starter to overheat and damage the starter. Release the start button for approximately 10 seconds before pressing it again.

(cont'd)