


# If a Fuse Blows

---

All of the electrical circuits on your ATV have a fuse to protect them from damage caused by excess current flow (short circuit or overload).

If something electrical on your ATV stops working, the first thing you should check for is a blown fuse ( 1 ).

Check the fuse before looking elsewhere for another possible cause of the problem. Replace a blown fuse and check component operation.

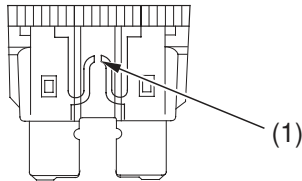

(1) blown fuse

The fuse is located in the battery compartment.

A spare fuse is located in the owner's manual storage area, which is located on the underside of the seat (page 85 ).

## Recommended Fuse

main fuse	15 A
-----------	------