

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, how to use the throttle and brakes, and what to do when you're through riding.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines ([page 180](#)).

For information about carburetor adjustment for riding at high altitude, see [page 181](#).

Safe Riding Precautions	41
Off-road Use Only.....	41
Keep Hands and Feet on Controls.....	42
Control Speed	43
Use Care on Unfamiliar or Rough Terrain	44
Do Not Perform Stunts.....	45
Starting & Stopping the Engine.....	46
Preparation.....	46
Starting Procedure	47
Flooded Engine.....	50
How to Stop the Engine.....	50
Shifting Gears.....	51
Riding in Reverse	53

(cont'd)