

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL MAINT.			REGULAR MAINT. INTERVAL			Refer to page
			mi	100	600	1200	Refer to page		
			km	150	1000	2000			
			MONTH	1	6	12			
NOTE	HOURS	20	100	200					
*	FUEL LINE					I		—	
*	THROTTLE OPERATION					I		103	
*	CARBURETOR CHOKE					I		105	
	AIR CLEANER	NOTE 1			C	C		98	
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I		102	
	SPARK PLUG				I	I		112	
*	VALVE CLEARANCE				I	I	I	115	
	ENGINE OIL				INITIAL = 100 mi (150 km), 20 operating hours or 1 month: R REGULAR = Every 600 mi (1000 km), 100 operating hours or 12 months: R			90	
**	ENGINE OIL STRAINER SCREEN					C		—	
**	ENGINE OIL CENTRIFUGAL FILTER					C		—	
*	ENGINE IDLE SPEED				I	I	I	111	

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 190).

** In the interest of safety, we recommend these items be serviced only by your dealer.