

Engine Oil

3. Pour the drained oil into a suitable container and dispose of it in an approved manner ([page 156](#)).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

Add Engine Oil:

1. Reinstall the oil drain bolt with the new sealing washer and tighten it to the specified torque:
18 lbf·ft (25 N·m , 2.5 kgf·m)
2. Fill the crankcase with the recommended grade oil approximately:
1.6 US qt (1.5 ℓ)
3. Reinstall the oil fill cap/dipstick.
4. Start the engine and let it idle for 3 – 5 minutes.
5. Stop the engine, wait 2 – 3 minutes and check the oil level. Make sure the oil is between the upper and lower level marks on the oil fill cap/dipstick. If necessary, add more oil but do not overfill.
6. Reinstall the oil fill cap/dipstick.
7. Check that there are no oil leaks.

If a torque wrench is not used for installation, see your dealer as soon as possible to verify proper assembly.