

# Riding in Reverse


- Leaving your left hand on the clutch lever/parking brake lever, remove your right hand from the throttle and place it on the reverse assist lever (3). Turn the reverse assist lever clockwise.
- While turning the reverse assist lever, depress the shift lever to reach the reverse gear (below neutral). Make sure that the reverse indicator (4) comes on.
- Remove your right hand from the reverse assist lever.

## NOTICE

*If the shift lever is moved while the vehicle is moving, the transmission may be damaged.*


- Release the rear brake pedal.
- Slowly release the clutch lever/parking brake lever and open the throttle gradually to begin reverse operation.

### RIGHT SIDE

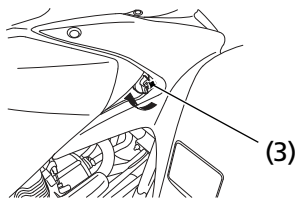

(3) reverse assist lever

### CENTER OF HANDLEBAR

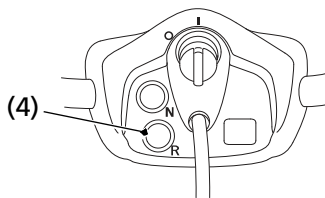

(4) reverse indicator

- Ride slowly. Do not open the throttle suddenly or make abrupt turns.