


# Indicators & Displays

---

## Odometer

The odometer (1) registers total distance traveled in mileage while the ignition is ON (I) with the ODO display (2). The odometer locks at 999,999 when the read-out exceeds 999,999.

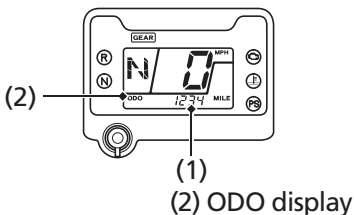


(1) odometer

(2) ODO display

## Tripmeter

The tripmeter (1) shows mileage per trip with the TRIP display (2), while the ignition is ON (I) since you last reset the tripmeter. The tripmeter returns to 0.0 when the read-out exceeds 999.9. To reset the tripmeter to 0.0, press the mode button (3) and hold it in for at least 2 seconds in the tripmeter mode.

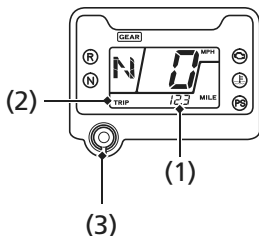

(1) tripmeter

(3) mode button

(2) TRIP display