

# Indicators & Displays

---

When the fuel gauge show E \_ \_ \_ \_ \_ F (4) and LO FUEL (5) blink 3 times alternately and fuel mark blinks, you should refill the tank as soon as possible.

The amount of fuel reserve is approximately:

1.29 US gal (4.9 ℓ)



(4) E \_ \_ \_ \_ \_ F

 
(5) LO FUEL

Fuel gauge failure:

If the fuel gauge function fails E - - - - - F (6) will blink.

See your dealer.

(The fuel mark disappears except the fuel gauge display)



(6) E - - - - - F