

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL MAINT.			REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200		
				km	150	1000	2000	
			MONTH	1	6	12		
NOTE	HOURS	20	100	200				
*	FUEL LINE					I		—
*	THROTTLE OPERATION					I		156
	AIR CLEANER	NOTE 1				C	C	150
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2				I	I	155
	SPARK PLUG					I	I	158
*	VALVE CLEARANCE				I	I	I	161
	ENGINE OIL				INITIAL= 100 mi (150km), 20 operating hours or 1 month: R			130
	ENGINE OIL FILTER				REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			135
*	ENGINE IDLE SPEED				I	I	I	—
*	EVAPORATIVE EMISSION CONTROL SYSTEM (For AC type)	NOTE 4			I: EVERY 2 YEARS			—
	RADIATOR COOLANT	NOTE 3				I	I	143
*	COOLING SYSTEM	NOTE 2				I	I	—

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 250).