


# If a Fuse Blows

## Main and ES (shift motor) Fuses Access

1. To prevent an accidental short circuit, turn the ignition switch to OFF (w) before checking or replacing the fuses.
2. Remove the seat (page 122).
3. Remove the rear fender cover (page 125).
4. To access the main fuses (2) (3) and ES (shift motor) fuse (4), remove the fuse box cover (5).

### UNDER REAR FENDER COVER

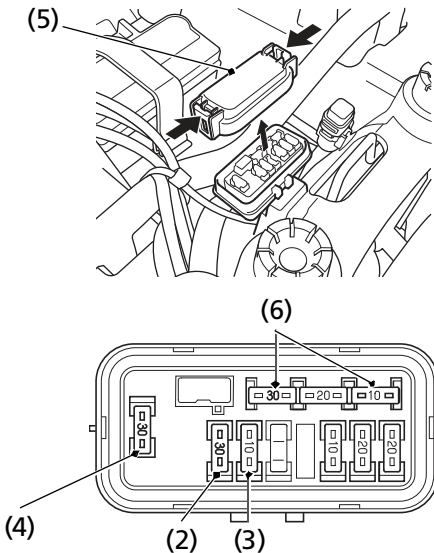

(2) main fuse 1

(3) main fuse 2

(4) ES (shift motor) fuse

(5) fuse box cover

(6) spare fuses

5. Pull the main fuse out.  
If it is blown, install the spare fuses (6).

(cont'd)