

# Scraper


Refer to *Safety Precautions* on page 95 .

The scraper on rear upper arm protects the rear arm and also scrapers mud from inside the rear wheel rims.

The scraper wear will depend upon the severity of usage and riding conditions. The scraper will wear faster in wet or muddy conditions.

## LEFT REAR

(Right side similar)

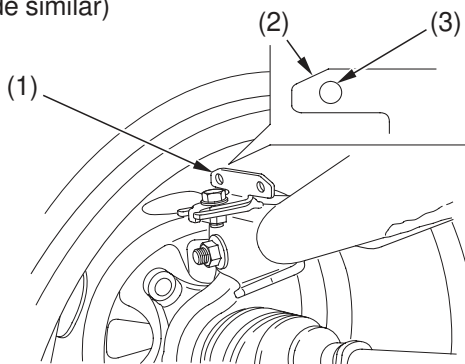

(1) scraper

(2) wear limit point

(3) wear indicator

## Inspection

Check the scraper ( 1 ) on the rear upper arm for cracks, damage, wear or looseness at the intervals specified in the Maintenance Schedule.

If the scraper is cracked, damaged or the wear limit point ( 2 ) is worn to the wear indicator ( 3 ), see your dealer to have the scrapers replaced.

Always inspect each scraper on both rear wheels.