

# Riding in Reverse

---

## NOTICE

*Your ATV may be equipped with a reverse speed limiter, which helps the vehicle to maintain a safe speed while riding in reverse gear.*

4. The gear position indicator shows “R”.
5. Release the rear brake lever/parking brake lever.
6. Open the throttle gradually and ride slowly. Do not open the throttle suddenly or make abrupt turns.
7. To stop, close the throttle and gradually apply both the front and rear brakes. Do not abruptly apply the rear brake by itself.
8. To shift out of reverse and into neutral, press the upshift switch (4) once to shift into “N” (neutral) gear.

The transmission cannot be shifted from neutral back into reverse when the engine speed is above 2,300 rpm or speed of your ATV is above 2 mph (3 km/h).

The transmission cannot be shifted from reverse shift up to neutral when the engine speed is above 2,300 rpm or speed of your ATV is above 1 mph (1.5 km/h).

When you stop riding in reverse and turn the ignition switch to the OFF (  ) position

After the engine stops, turn the ignition switch to the ON (  ) position. The transmission is shifted in neutral automatically.

## WARNING

Applying only the rear brake abruptly when operating in reverse gear could cause the front wheels to lift off the ground and the ATV could overturn backwards.

Carefully apply both the front and rear brakes when stopping in reverse gear.