


# Controls & Features

## Start Button



### LEFT HANDLEBAR

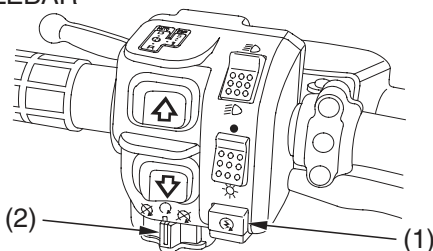

(1) start button

(2) engine stop switch

(⚡) START

(⊗) OFF

(○) RUN

The start button (1) is used for starting the engine. Pushing the button in starts the engine. See *Starting Procedure*, page 64.

When the start button is pushed, the starter motor will crank the engine. The starter motor will not operate if the engine stop switch is in the OFF (⊗) position when the start button is pushed.

## Engine Stop Switch



The engine stop switch (2) is used to stop the engine in an emergency. To operate, slide the switch to the OFF (⊗) position. The switch must be in the RUN (○) position to start the engine, and it should normally remain in the RUN (○) position even when the engine is OFF.

If your ATV is stopped with the ignition switch ON ( I ) and the engine stop switch OFF ( ⊗ ), the battery will discharge. Turn the ignition switch OFF ( O ) to prevent battery discharge.