

If the Transmission Is Not Functioning Properly

Automatic Shift (AUTO) Mode:

If the gear position indicator shows “—” or blinks, try rocking the ATV back and forth a few inches and then recheck the gear position indicator.

If the gear position indicator continues to show “—” or continues to blink while riding, perform the following:

1. Stop the ATV.
2. Turn the ignition switch to the OFF (○) position.
3. After the engine stops, turn the ignition switch to the ON (|) position.
4. Check the gear position indicator.

If, these efforts do not restore proper operation, have your ATV inspected by your dealer.