


# Operation Component Locations

---

rear cargo rack

front cargo rack

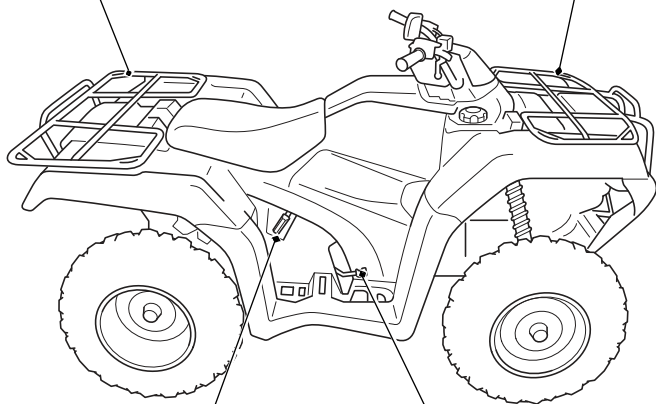

recoil starter  
(Canada only)

rear brake pedal