

Indicators & Displays

| | | |
|------------------------|----------------------------------|--|
| 5 | Multi-function display | The display includes the following functions. <i>Display Check</i> . |
| | 4WD indicator (Except TRX420TE1) | Shows when the 4WD drive mode engages (page 23). |
| | Gear position indicator | Shows the gear position (page 24). |
| | Speedometer | Shows riding speed. |
| | Fuel gauge | Shows approximate fuel supply available (page 25). |
| | Digital clock | Shows the time (hours and minutes) (page 27). |
| | Odometer | Shows accumulated mileage (page 28). |
| | Tripmeter | Shows mileage per trip (page 28). |
| | Coolant temperature gauge | Shows approximate coolant temperature (page 29). |
| | Hour meter | Shows hours and tenths of hours of engine operation (page 31). |
| | Maintenance minder indicator | Shows when specified maintenance interval is reached (page 32). |
| | Maintenance tripmeter | Inform when the mileage or operating hours on your ATV approaches and passes the interval specified on the maintenance schedule (page 32). |
| Maintenance hour meter | | |