

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT. INTERVAL			Refer to page	
			mi	100	600		1200
			km	150	1000		2000
			MONTH	1	6		12
NOTE	HOURS	20	100	200			
	DRIVETRAIN BOOTS				I	I	180
	FRONT/REAR FINAL GEAR OIL (Except TE1 model)				(R: EVERY 2 YEARS)	I	131, 134
	REAR FINAL GEAR CASE OIL (For TE1 model)				(R: EVERY 2 YEARS)	I	131
*	2WD/4WD SELECT SYSTEM (Except TE1 model)					I	—
*	BRAKE FLUID	(NOTE 3)			I	I	160
*	BRAKE SHOES WEAR	(NOTE 1, 2)				I	168
*	BRAKE PADS WEAR	(NOTE 1, 2)				I	163
*	BRAKE LIGHT SWITCH			I	I	I	169
	BRAKE SYSTEM GUARDS			I	I	I	160
	GUARDS				I	I	178
*	CLUTCH SYSTEM			I	I	I	151
*	SUSPENSION				I	I	157
*	SPARK ARRESTER				C	C	156
*	NUTS, BOLTS, FASTENERS			I		I	—
**	WHEELS/TIRES			I	I	I	171
**	TIE-ROD AND JOINT BOOTS			I	I	I	—
**	STEERING SHAFT HOLDER BEARINGS					I	—
**	STEERING SYSTEM					I	—

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 242).

** In the interest of safety, we recommend these items be serviced only by your dealer.