

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇨	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200	
			km	150	1000	2000	
			MONTH	1	6	12	
			NOTE	HOURS	20	100	
	DRIVETRAIN BOOTS						162
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL (Except TRX420TE)				(R:EVERY 2 YEARS)		114, 116
	REAR FINAL GEAR CASE OIL (TRX420TE only)				(R:EVERY 2 YEARS)		114
*	2WD/4WD SELECT SYSTEM (Except TRX420TE)						—
*	BRAKE FLUID	NOTE 3					142
*	BRAKE SHOES WEAR	NOTE 1,2					150
*	BRAKE PADS WEAR	NOTE 1,2					145
*	BRAKELIGHT SWITCH						151
*	BRAKE SYSTEM						142
*	REVERSE LOCK SYSTEM GUARDS						133
*	CLUTCH SYSTEM						160
*	SUSPENSION						132
*	SPARK ARRESTER				C	C	—
*	NUTS, BOLTS, FASTENERS						138
**	WHEELS/TIRES						—
**	TIE-ROD AND JOINT BOOTS						—
**	STEERING SHAFT HOLDER BEARINGS						—
**	STEERING SYSTEM						—

\* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 224).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.