

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		⇨	mi	100	600	1200	
			km	150	1000	2000	
			MONTH	1	6	12	
NOTE	HOURS	20	100	200			
	DRIVETRAIN BOOTS						163
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL (Except TRX420TE)				(R:EVERY 2 YEARS)		114, 117
	REAR FINAL GEAR CASE OIL (TRX420TE only)				(R:EVERY 2 YEARS)		114
*	2WD/4WD SELECT SYSTEM (Except TRX420TE)						—
*	BRAKE FLUID	NOTE 3					143
*	BRAKE SHOES WEAR	NOTE 1,2					151
*	BRAKE PADS WEAR	NOTE 1,2					146
*	BRAKE LIGHT SWITCH						152
	BRAKE SYSTEM						143
*	REVERSE LOCK SYSTEM GUARDS						134
	CLUTCH SYSTEM						161
*	SUSPENSION						133
*	SPARK ARRESTER				C	C	—
*	NUTS, BOLTS, FASTENERS						139
**	WHEELS/TIRES						—
**	TIE-ROD AND JOINT BOOTS						154
**	STEERING SHAFT HOLDER BEARINGS						—
**	STEERING SYSTEM						—

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 226).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.